


# Using your Dewey Document Camera Stand

1. Position stand in lowest height.
2. Place your iPad into the stand.

## Inserting iPad

The green piece slides in and out to secure iPad

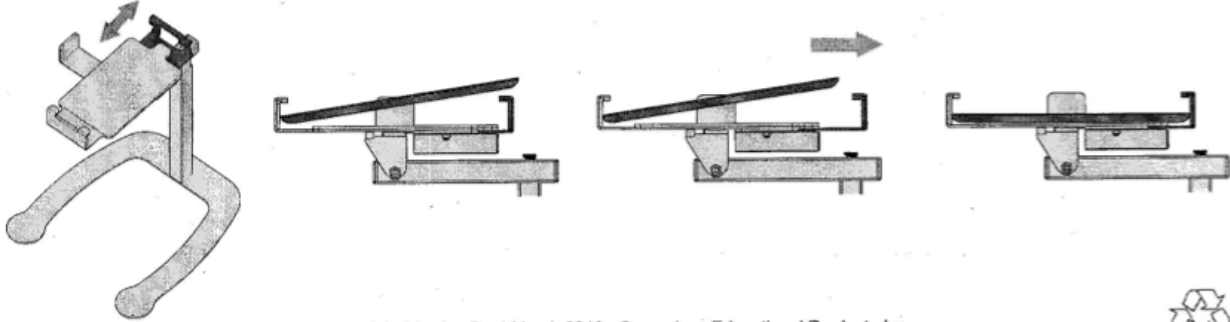

DCS1 - Version B - 4 March 2013 - Copernicus Educational Products Inc.

***\*\*If your case is a flip cover case place the iPad into the stand so that the cover is not covering either camera.***

3. Launch your app and adjust the desired height by sliding the Dewey stand neck up/down.




## Supported Paper Size

|  |                |
|--|----------------|
| Highest hole position 4<br><i>**Double lock at the highest hole to prevent accidental disassembly.</i> | 16" x 12"      |
| Hole position 3  | 14.25" x 10.5" |
| Hole position 2  | 12.5" x 9"     |
| Hole position 1  | 10.5" x 7.5"   |
| Provided template is for positioning 8.5" x 11" paper.   |                |


# Using your Dewey Document Camera Stand

4. The white template will help you locate an 8.5" x 11" page under your iPad.

## Position the Paper Template (OPTIONAL)

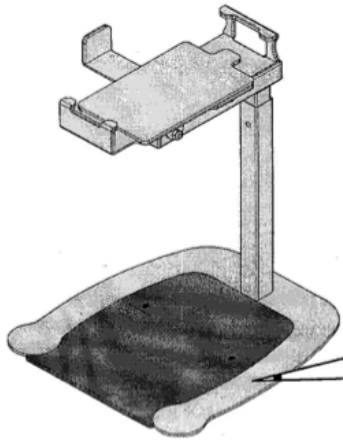


! Pay close attention to the orientation of iPad and 8.5"x11" paper. Then match the edge of the paper with the indicated line that the arrow points at. This helps to position your paper in the middle of your projection.

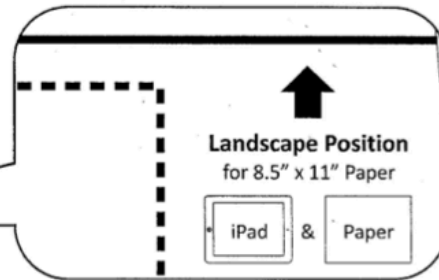

5. To change from landscape to portrait or vice versa rotate the top of the Dewey stand 90 degrees.

## Changing from Document Camera to Stand Position


Holding onto top Mechanism - tilt between Document Camera Position and Stand Position

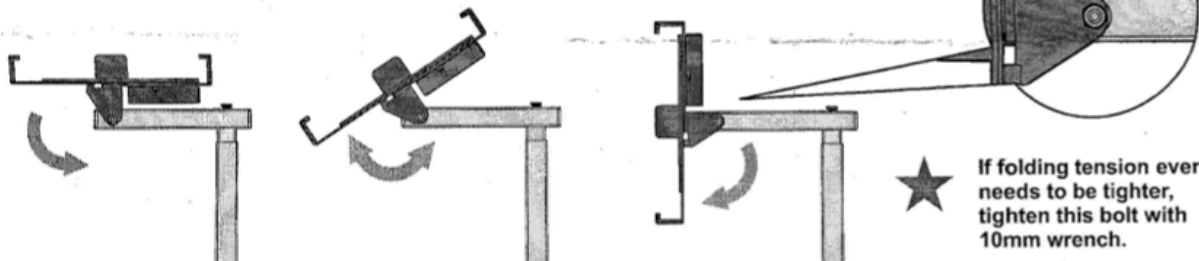

## Dewey the Document Camera Stand - Tips for Use

### To Change Projected Image

Holding onto top mechanism - turn iPad 90 degrees

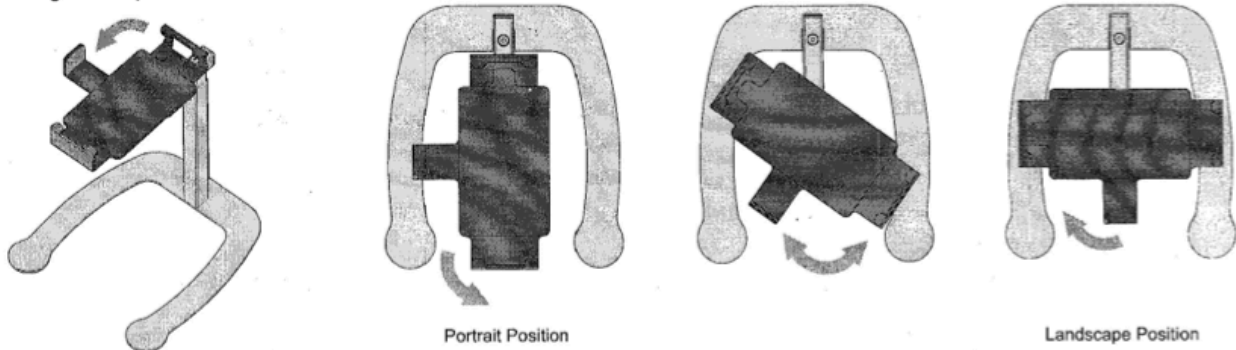

NOTE: Sometimes when you rotate the iPad your projected image does not rotate, in that case you need to tilt down the top mechanism to allow the iPad to adjust